



E 3818-1020

Position Ref.No. Repère Posizione Posicion	Menge Quantity Quantité Quantita Cantidad	Teile-Nr. Part-No. No. Référence Nr. d'Ordine No. Referenzia	Hinweis Hints Indications Indicazione Indicaciones	Position Ref. No. Repère Posizione Posicion	Menge Quantity Quantité Quantita Cantidad	Teile-Nr. Part-No. No. Référence Nr. d'Ordine No. Referenzia	Hinweis Hints Indications Indicazione Indicaciones
IV 50 DS				IV 58 DS			
1	1	11000090	FLS 50	1	1	11000092	FLS 58
2	1	11002357		2	1	11002357	
3	1	12000216		3	1	12000216	
4	1	10005814		4	1	10005814	
5	1	20026361		5	1	20026361	
6	2	20025055		6	2	20025055	